



Foldable Timber Clothes Dryer Assembly Manual

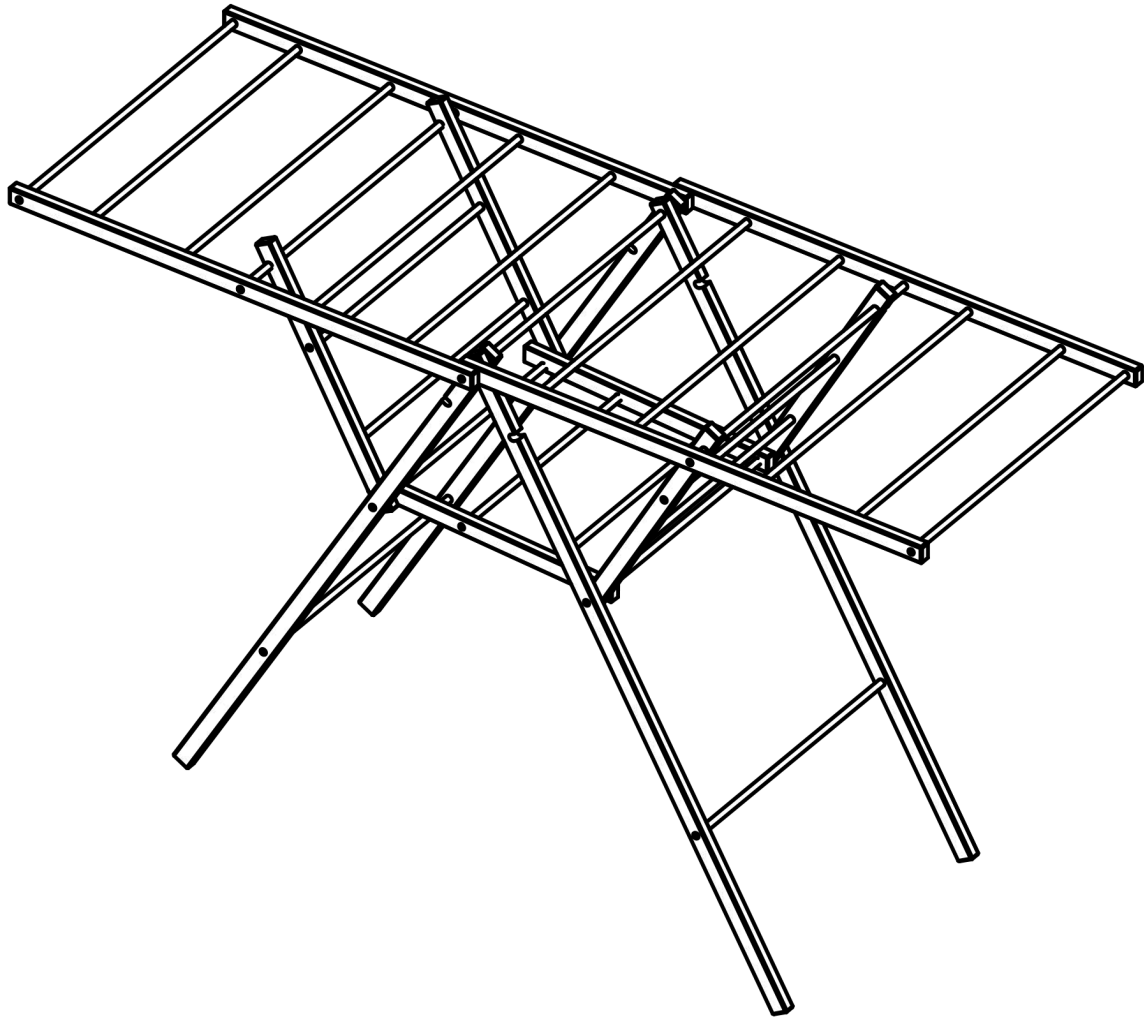


Welcome!

Before you begin, make sure you have 45 minutes to dedicate to assembling this product. We recommend you to do the assembly on a carpet. Doing it with another person makes the process easier.


To begin, we are going to sort out all pieces by type. Align them on the floor as you go through it. First, there is a bag of screws and a screwdriver. Make sure you save these. You will use them at the very end.

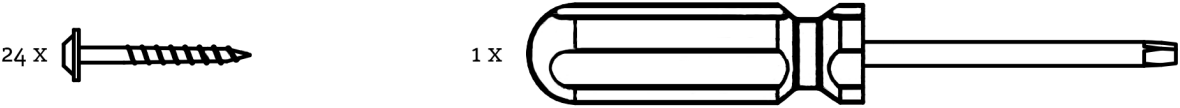


The rest is made of pieces of wood, all different. There are five types of dowels:

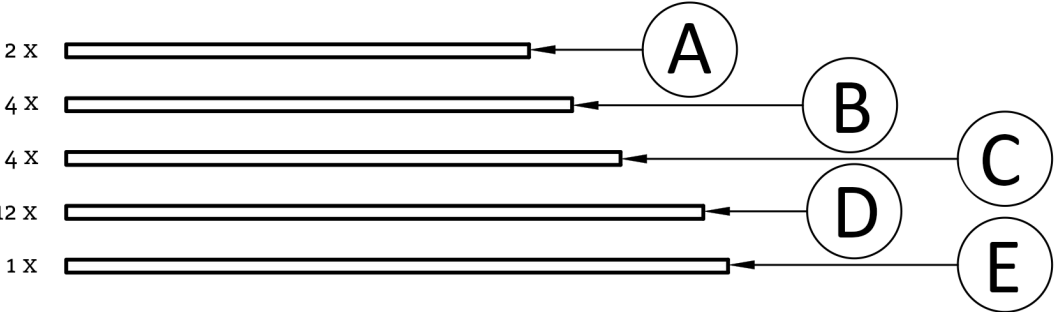

There are also many bars. Some of them have large holes going through (black dots), and two are branded “Ecodri”:

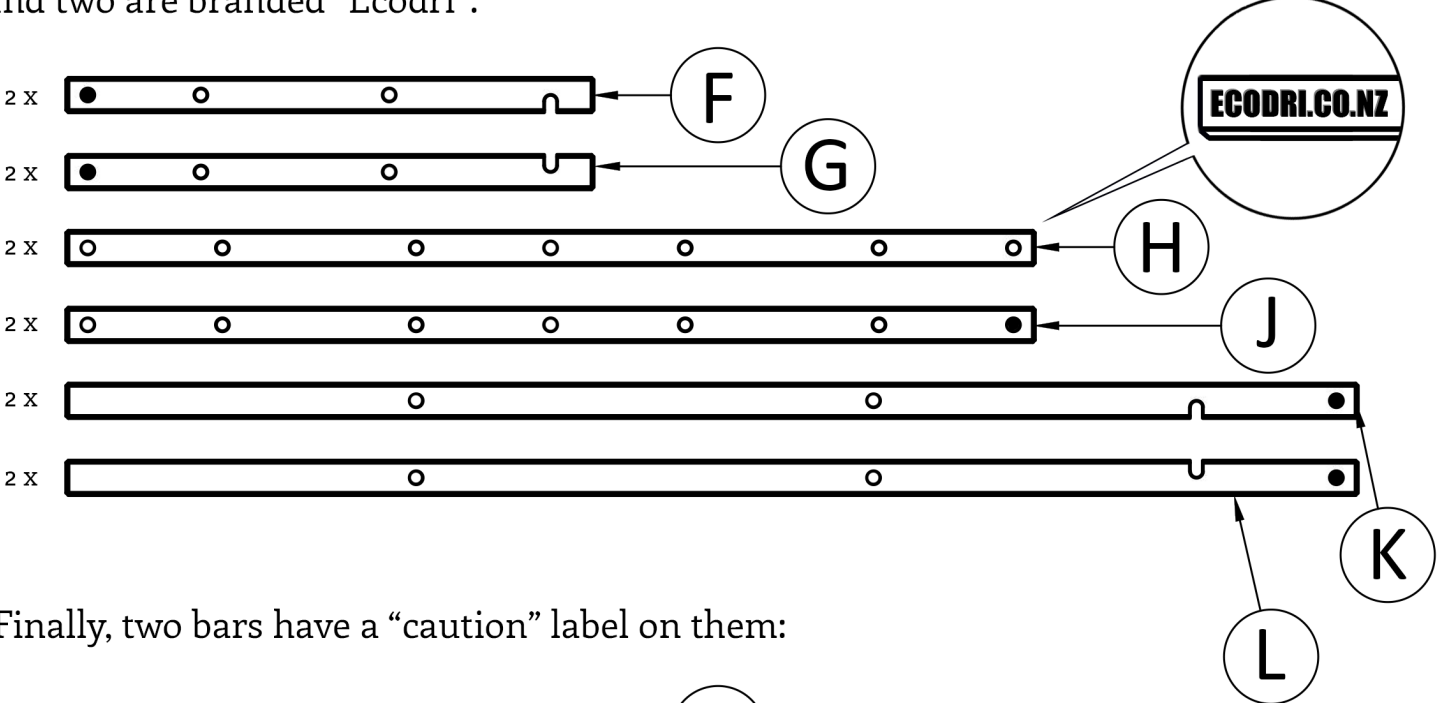


Finally, two bars have a “caution” label on them:

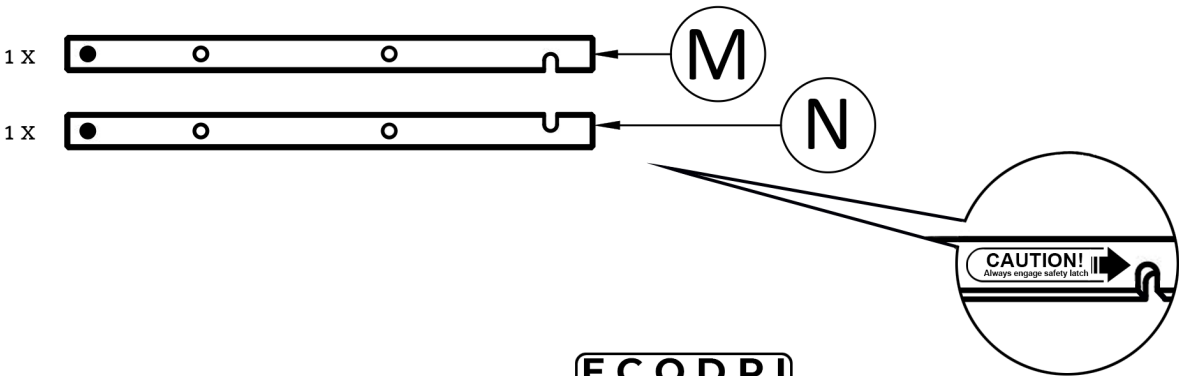


Excellent! Now we will start the assembly. We are going to build 2 separate parts that we will add together at the end.


We will begin with “*latch assembly 1*”. To assemble it, you will have to gently seat the bar onto the dowels by bumping it with your fist, or use a hammer with a soft layer, such as a towel, on top of the beam. You will use this method throughout the assembly process. Follow these steps :

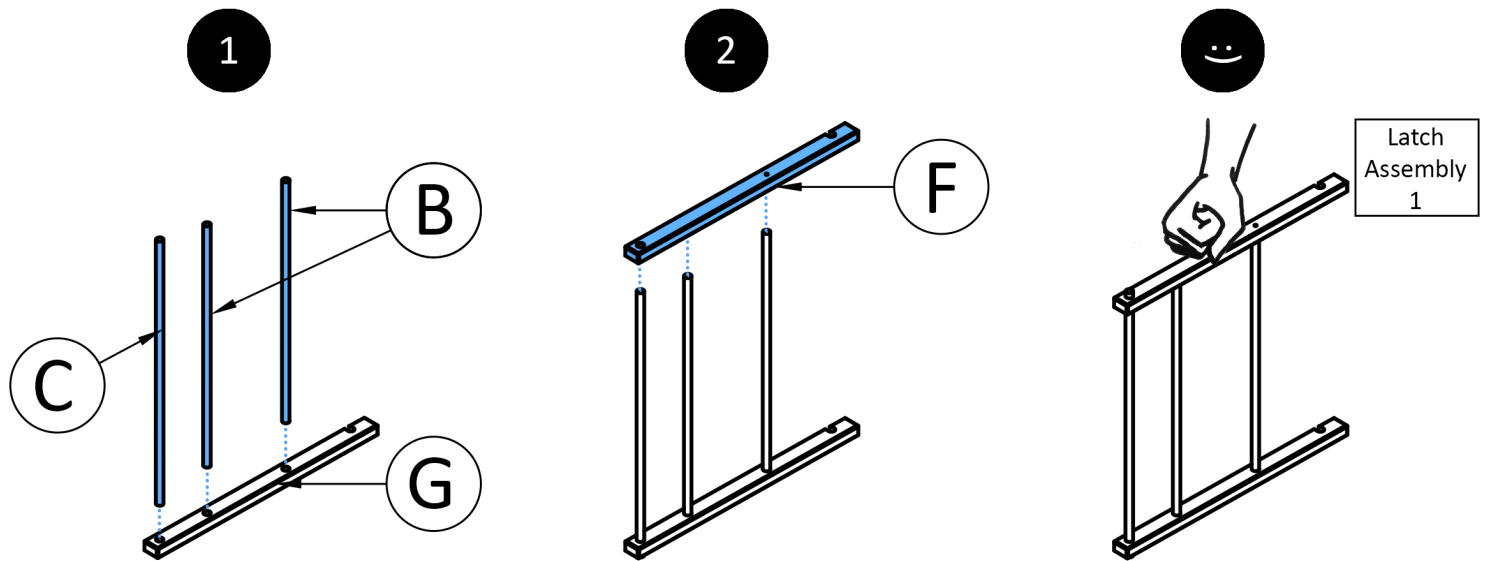


Nice! Put this part aside.

Now we will build “*latch assembly 2*”. The steps are similar:

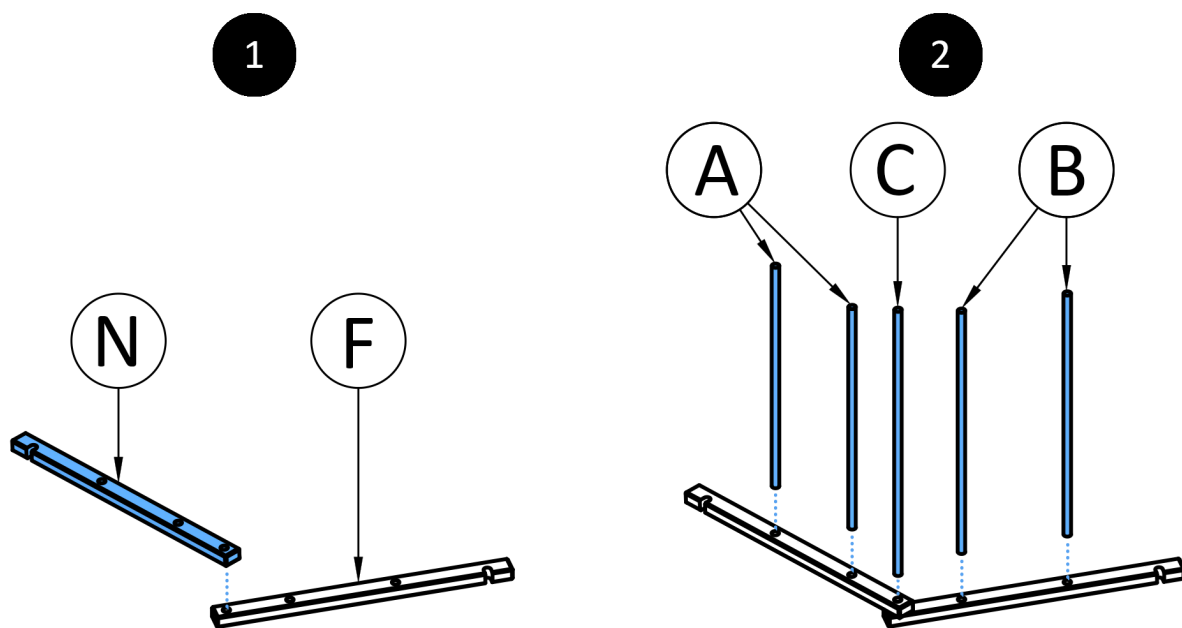

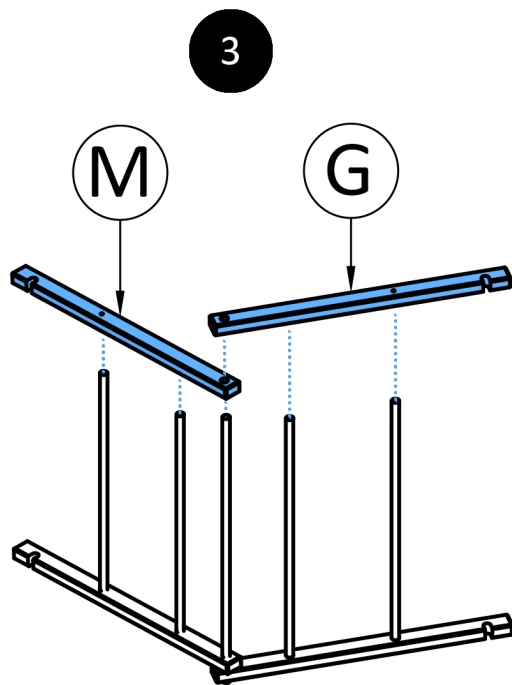


Latch
Assembly
2

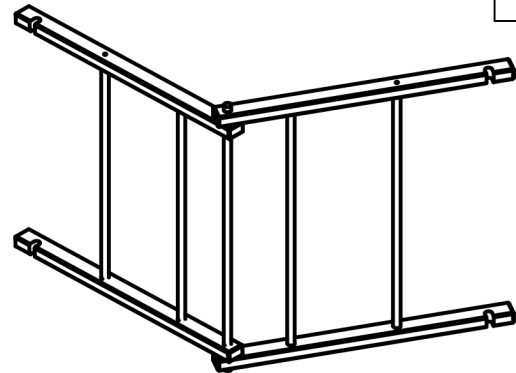


Great! All parts are ready.

In the final step, we are going to assemble them all. To begin, we are going to lay a set of bars on the floor. The “J” bar has a hole going through it on one end: place this hole on top of the “H” bar as shown below:

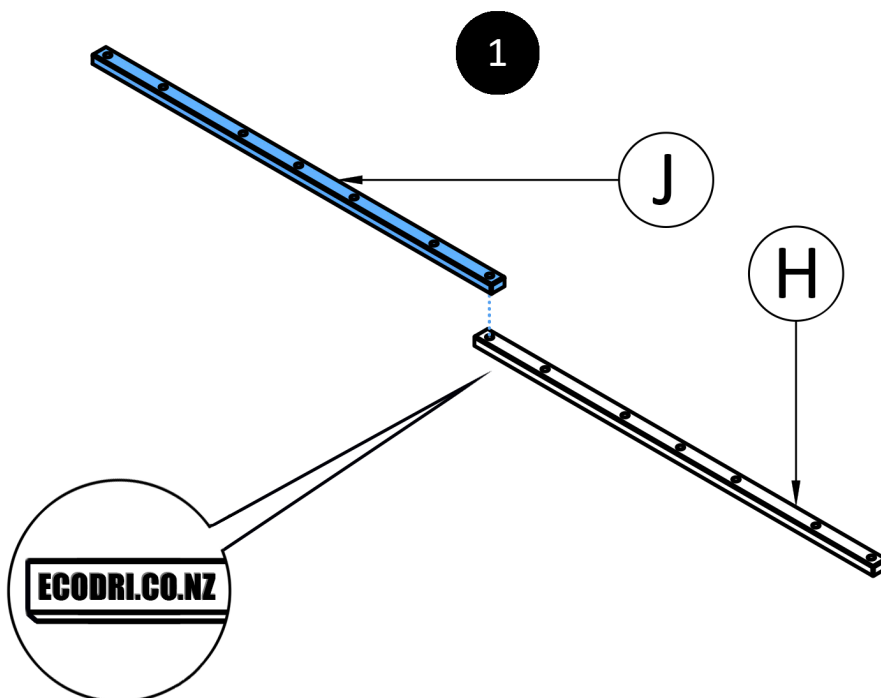



The “H” bar is branded. Place the brand on the side where both bars meet.

Follow the same approach for two other bars, aligning holes on top of each other:

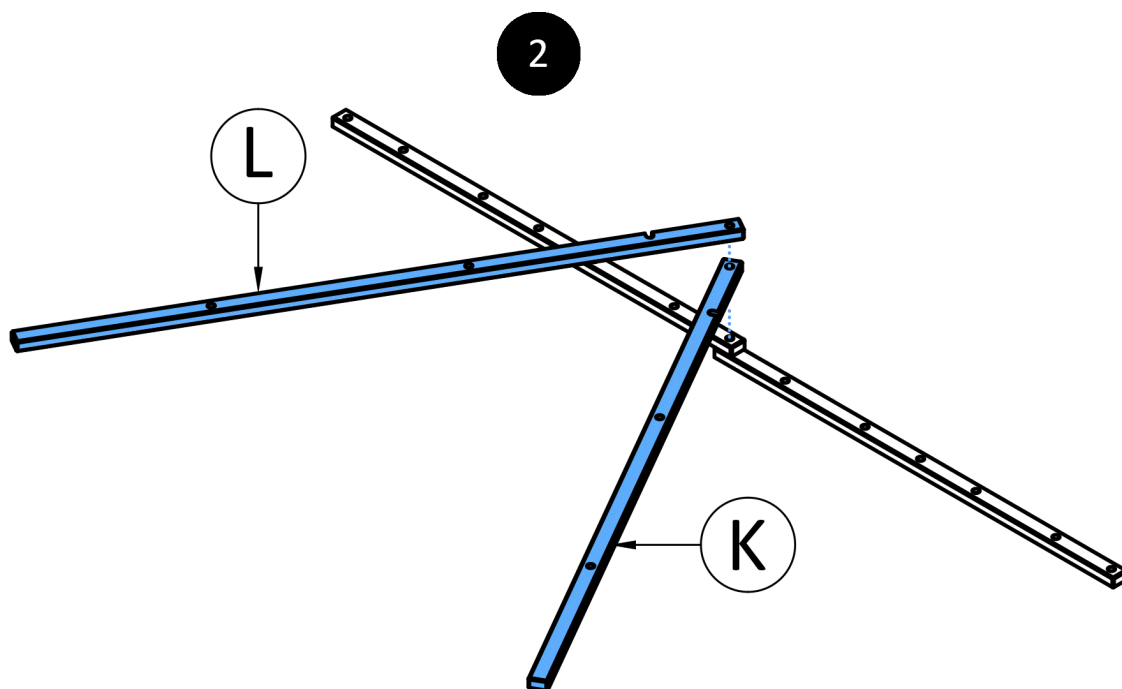


Great! we will now place all dowels in the holes, starting with the central dowel that will hold our four bars together:

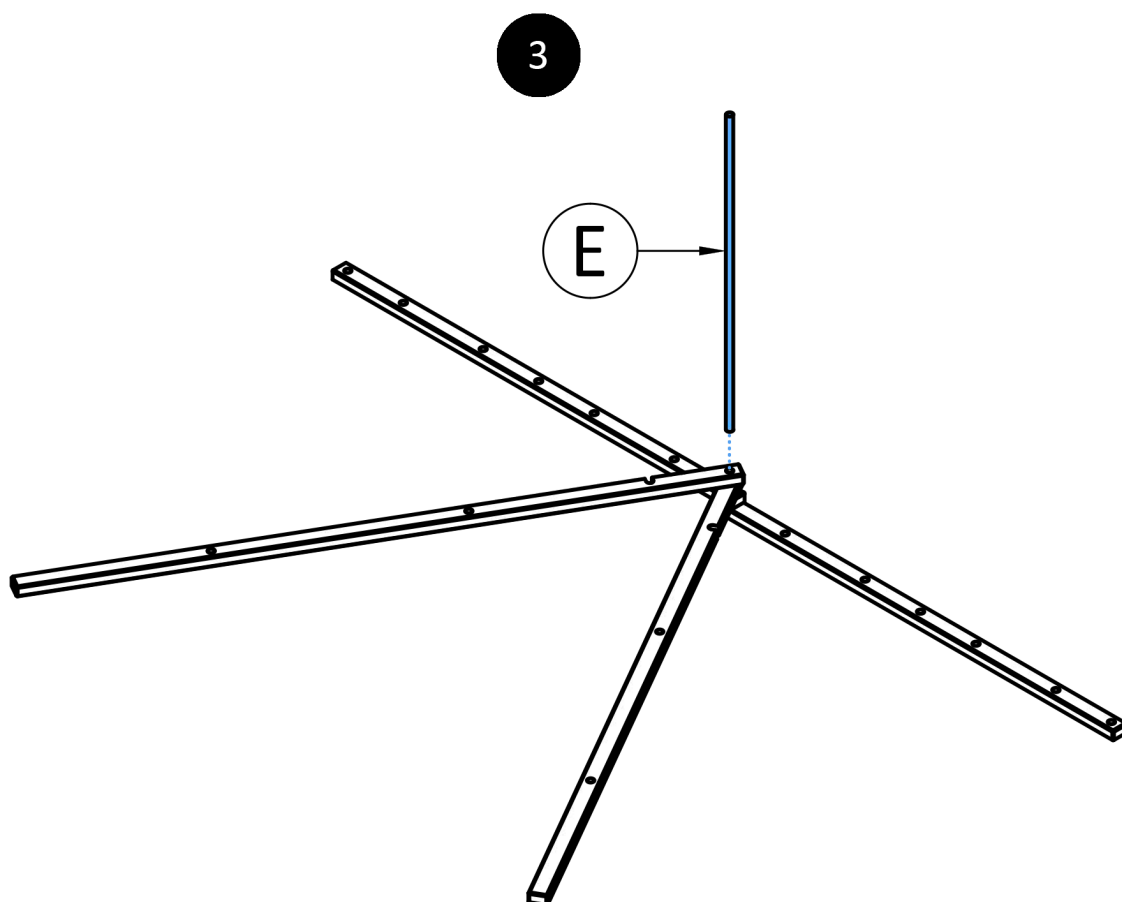


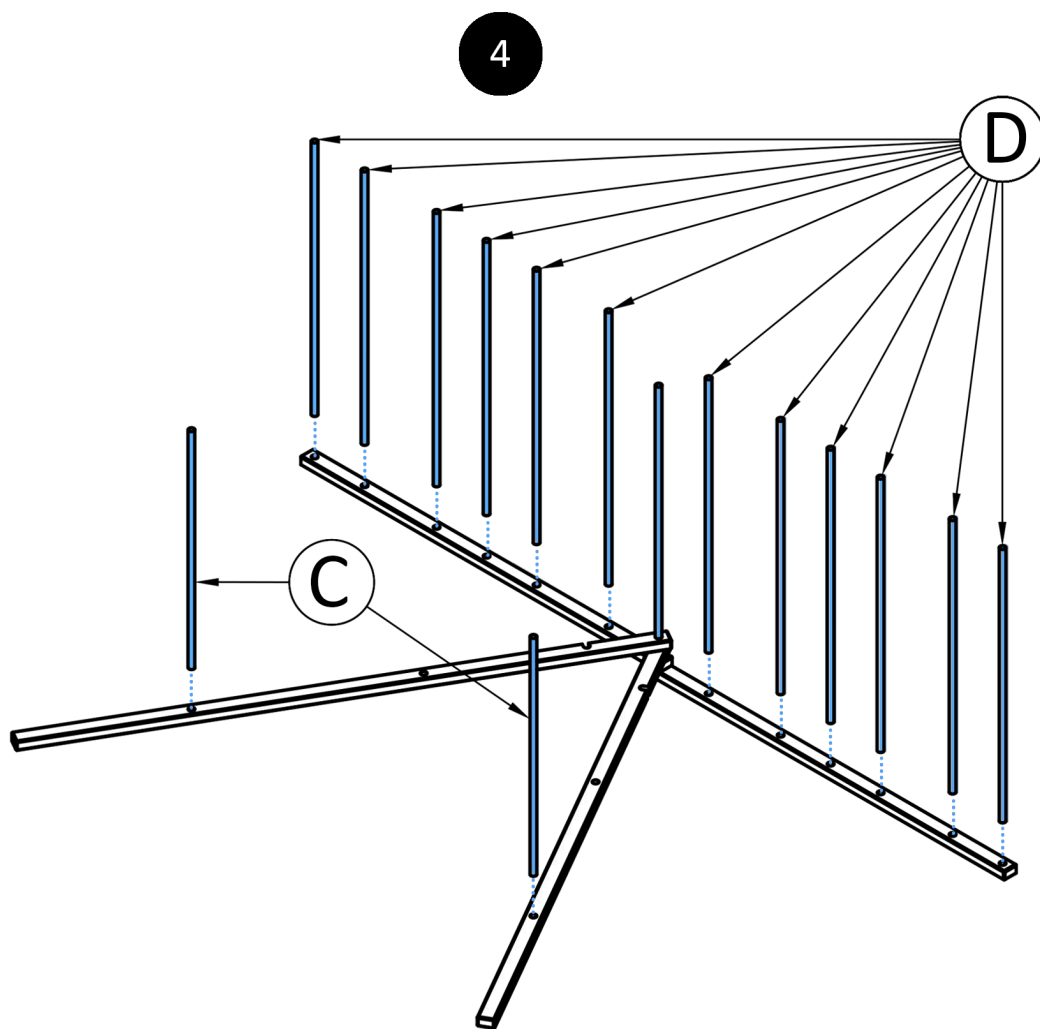


We can now add the part you made earlier. Position “*Latch Assembly 1*” onto the set of bars. The long dowel popping out of “*Latch Assembly 1*” should sit in a hole:

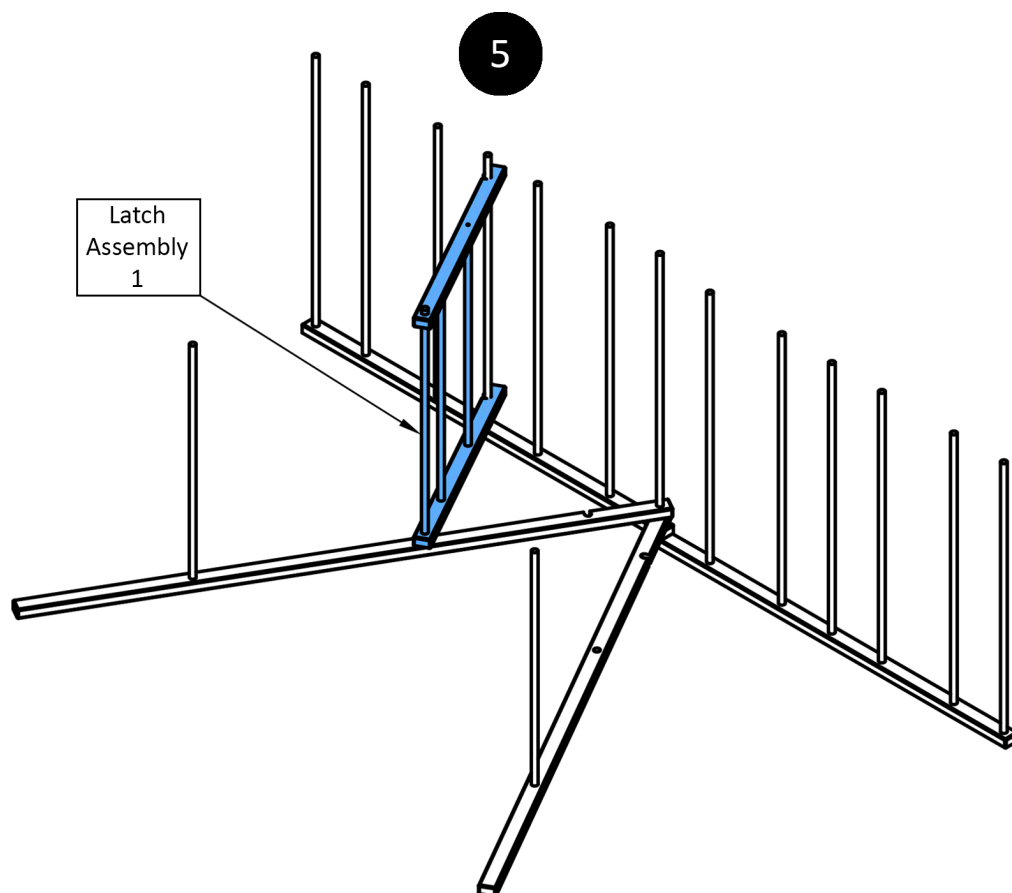


Now position “*Latch Assembly 2*” onto the set of bars.

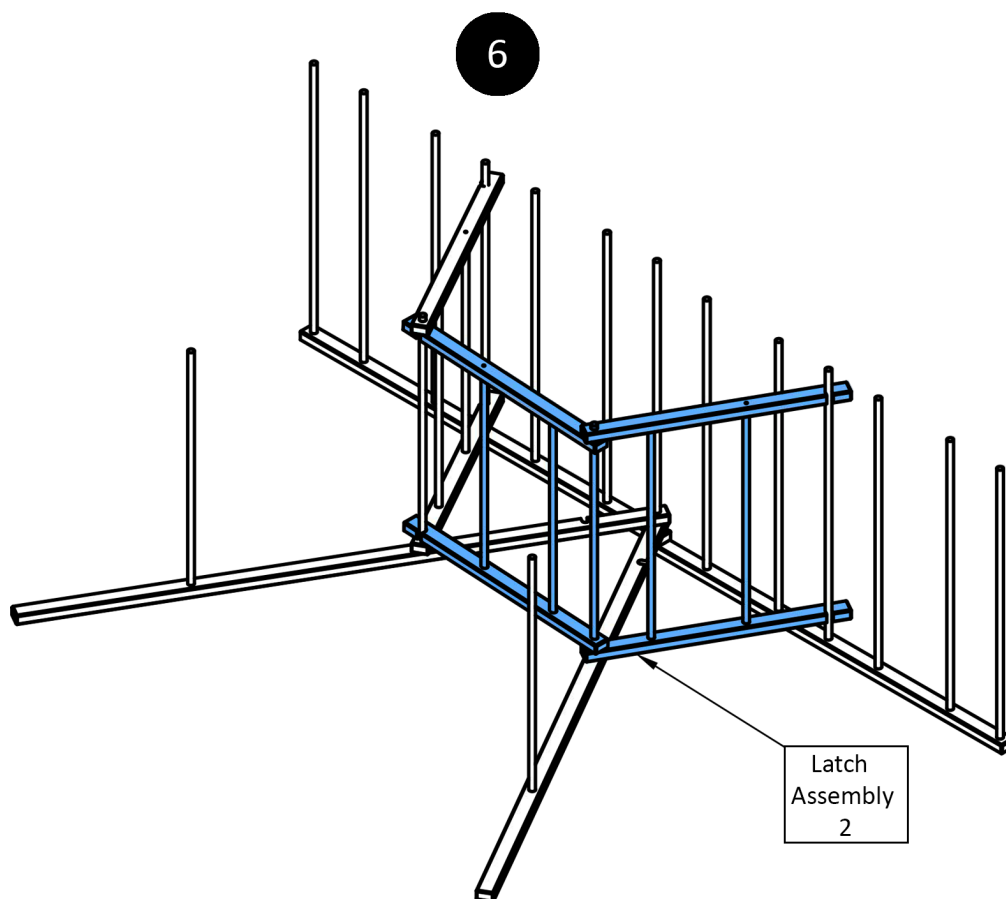


Add two bars on top of these parts, securing “*Latch Assembly 1*” and “*Latch assembly 2*” into place:

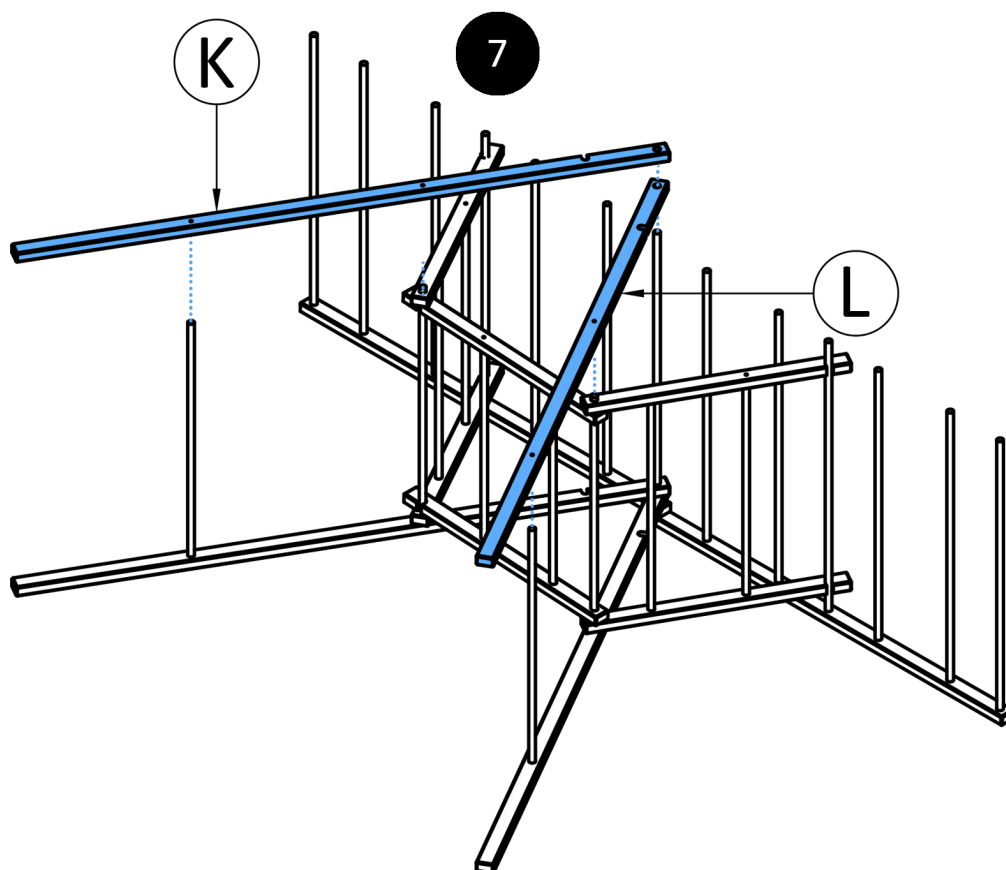


It is almost the end! Take the remaining bars and place them on top, aligning all dowels with the holes. Remember : work from one end to the other.

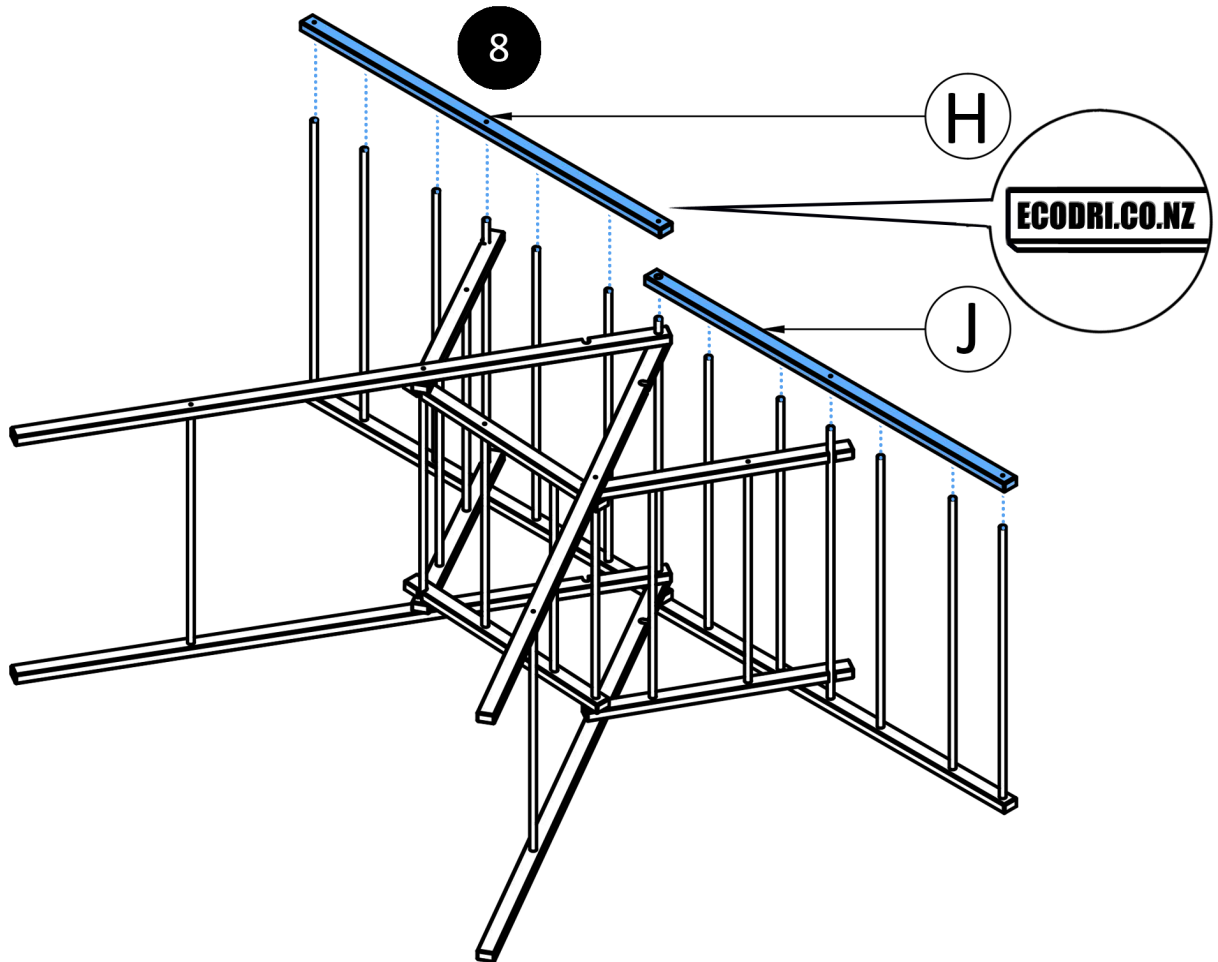

You can now screw the dryer together. Start with one side. One person can hold on to the dowel while the other screws it in. Ensure the screws firmly seat the bar onto the dowels:

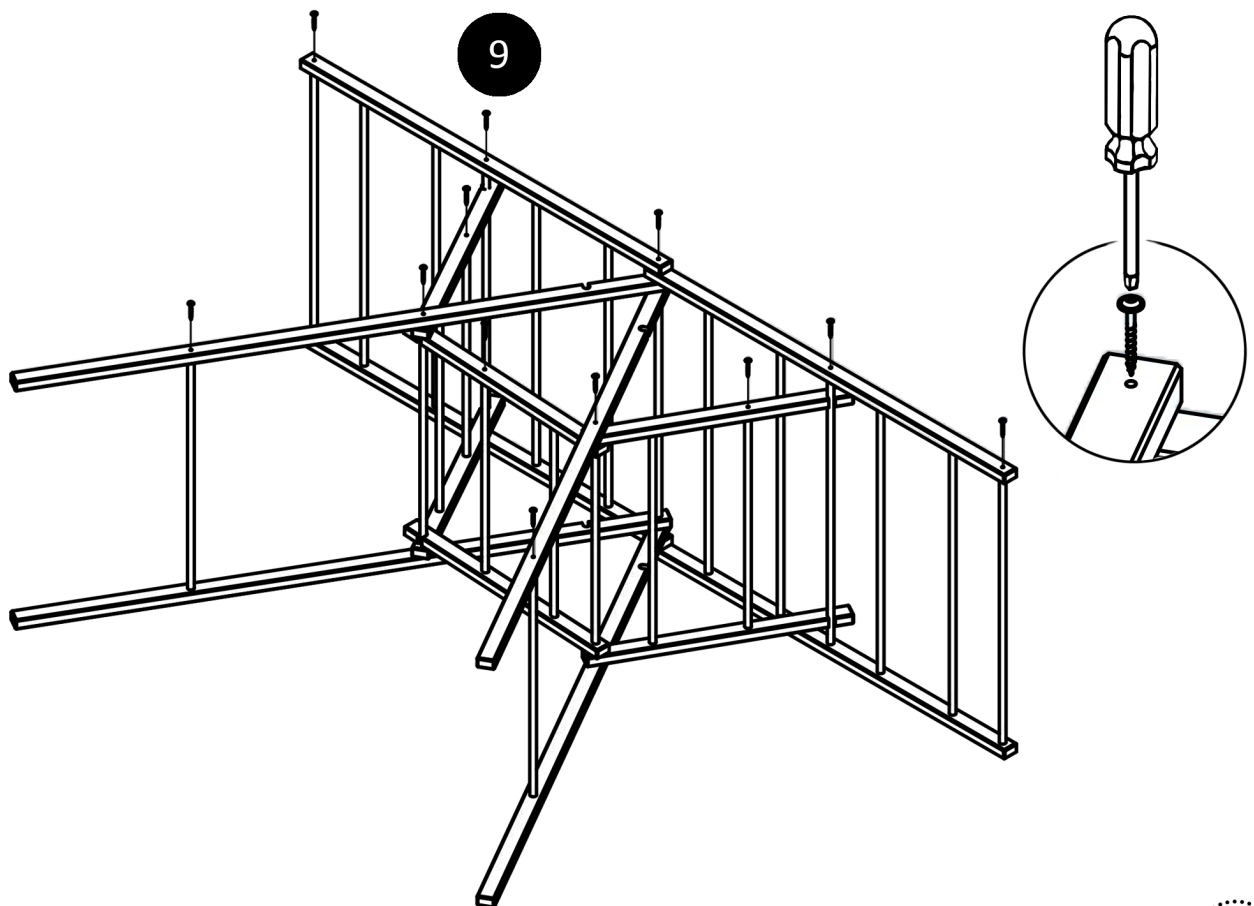

Fold the dryer up, then turn it over, and do the same on the other side :

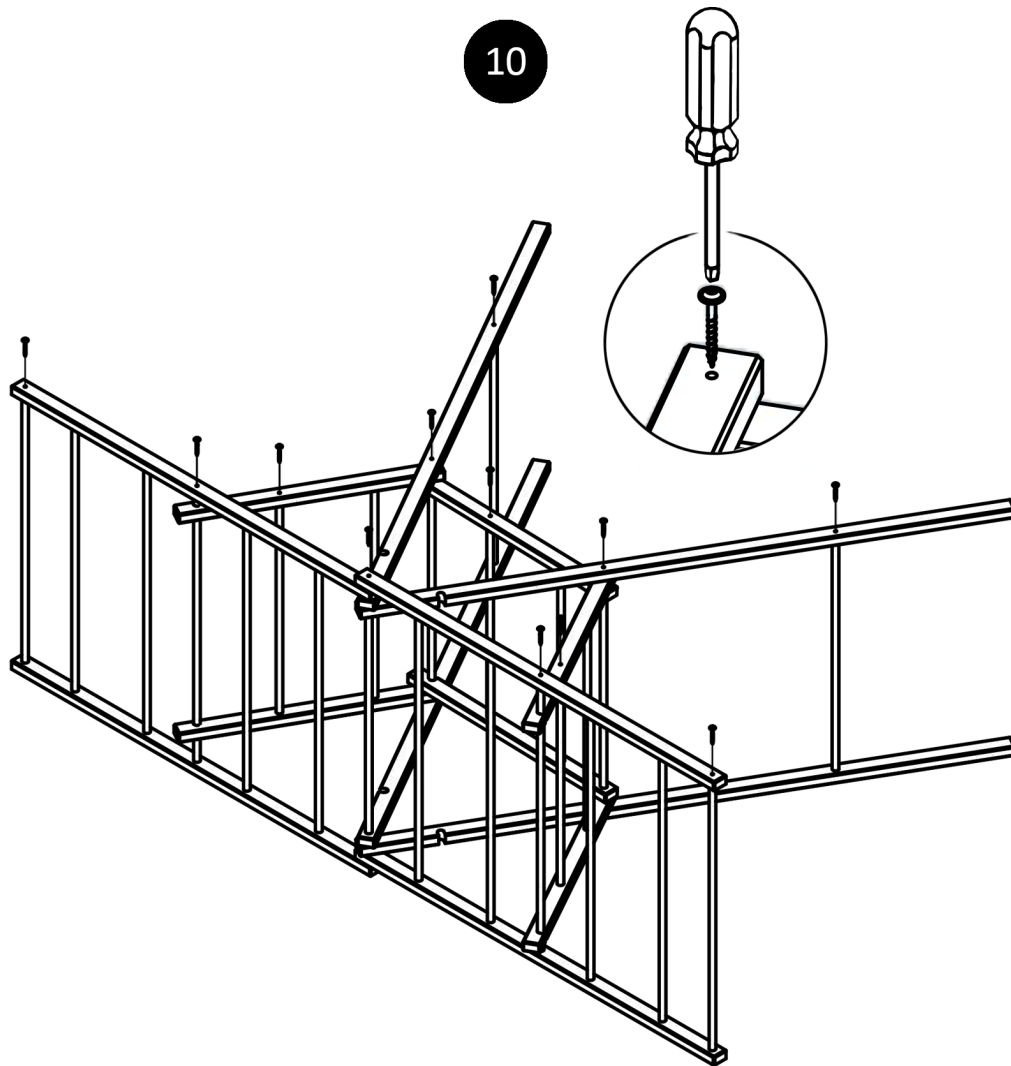

The dryer is ready for use. Congratulations! Enjoy!

To Stand Up Position:

- Raise the clothes dryer to stand up position, unfolding the structure as you go.
- Once in stand up position, engage all safety latch slots onto the bar. Ensure that all three of them are engaged.

To Fold Down Position:

- Release safety latches, then slowly fold the dryer.

Note: Some initial stiffness may occur with timber when standing up and folding down, this will ease with use.

If you have any comments, feedback, contact us at sbs.ltd@xtra.co.nz.

The team at Ecodri